









A700 变频器设置 D8120=H9F 格式

Pr.117=0

Pr.118=192

Pr.119=1

Pr.120=2

Pr.121=9999

Pr.122=9999

Pr.123=20

Pr.124=0

Pr.79=1

注意：每次变频器先清零再设置参数，设置后要将其断电后再通电，方可进行通讯